

Halogen Lighting / Fire Hazards

MSS



MSS sensors uses only 800 watts per meter of width.

MSS employs a lamp cooling mechanism to reduce risk of fires.

<u>Others</u>




Others use more then 2x the amount of power/wattage which causes enormous amounts of heat = <u>FIRE HAZARD</u>. At least 3 incidents have been documented in Europe and the US where plant fires were caused by sorting modules due to the excessive heat.



Transmission Sensor Standard Option

MSS



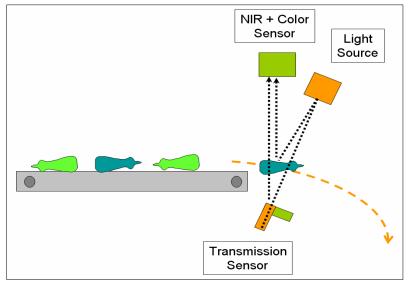

- Identification of opaque PET
- Identification of translucent **bottles (HDPE Natural)**

Others

Not available



Software User Interface + Parameters

MSS

Description: Value Units: # Description: Value Units: 1 Description: Value Units: 2
2 Eject Delay Up
3 Metal Detector Delay 41 inches 43 Ejection Configuration 0 none 4 Min. No of Channels 30 none 44 Metal Detector Present 0 0/1 5 Maximum Dark Value 200 none 45 Comm Type 1 0/1 6 Unknown Object Threshold 8 percent 46 Start-Up Delay 0 secon 7 Spatial Filter Type Down 3 none 47 DS Temperature Limit 40 Celsis 8 Filter Threshold Down 6 none 48 Coolbox Temperature Fault Enable 0 0/1 9 Footprint Type Down 0 none 49 Filter Set 0 0/1/12
4 Min. No. of Channels 30 none 44 Metal Detector Present 0 0.01 5 Maximum Dark Value 200 none 45 Comm Type 1 0/1 6 Unknown Object Threshold 8 percent 46 Start-Up Delay 0 secon 7 Spatial Filter Type Down 3 none 47 DSP Temperature Limit 40 Celsis 8 Filter Threshold Down 6 none 48 Coolbot Temperature Fault Enable 0 0/1 9 Footprint Type Down 0 none 49 Filter Set 0 0/1/2
5 Maximum Dark Value 200 none 45 Comm Type 1 0/1 6 Unknown Object Threshold 8 percent 46 Start-Up Delay 0 secon 7 Spatial Filter Type Down 3 none 47 DSP Temperature Limit 40 Celsis 8 Filter Threshold Down 6 none 48 Coolbox Temperature Fault Enable 0 0/1 9 Footprint Type Down 0 none 49 Filter Set 0 0/1/12
6 Unknown Object Threshold 8 percent 46 Start-Up Delay 0 secon 7 Spatial Filter Type Down 3 none 47 DSP Temperature Limit 40 Celsix 8 Filter Threshold Down 6 none 48 Coolbox Temperature Fault Enable 0 0/1 9 Footprint Type Down 0 none 49 Filter Set 0 0/1/2
7 Spatial Filter Trype Down 3 none 47 DSP Temperature Limit 40 Celsiv 8 Filter Threshold Down 6 none 48 Coolbox Temperature Fault Enable 0 0/1 9 Footprint Type Down 0 none 49 Filter Set 0 0/1/2
8 Filter Threshold Down 6 none 48 Coolbox Temperature Fault Enable 0 0/1 9 Footprint Type Down 0 none 49 Filter Set 0 0/1/2
9 Footprint Type Down 0 none 49 Filter Set 0 0/1/2
10 Spatial Filter Type Up 3 none 50 Unused 0 Units
11 Filter Threshold Up 8 none 51 Unused 0 Units
12 Footprint Type Up 0 none 52 Transmission Sensor 1 0/1
13 Down Pre-Fire Distance 5 inches 53 Index Offset 225 none
14 Down Post-Fire Distance 5 inches 54 Low Temp. 11 C
15 Up Pre-Fire Distance 0 inches 55 High Temp. 13 C
16 Up Post-Fire Distance 0 inches 56 Channel Mask 0 65535 none
17 Default Fire Direction 1 none 57 Channel Mask 1 65535 none
18 Unused 0 Units 58 Channel Mask 2 65535 none
19 Normalization Timer Length 120 none 59 Channel Mask 3 65535 none
20 Image Dump Trigger Threshold 2 pixels 60 Channel Mask 4 0 none
21 Object Recognition Enable 1 0/1 61 Channel Mask 5 0 none
22 Minimum Object Size 3 pixels 62 Channel Mask 6 0 none
23 Maximum Object Size 200 pixels 63 Channel Mask 7 0 none
24 Maximum Object Length 18 pixels 64 Gain 0 3 none
25 Maximum Object Width 18 pixels 65 Gain 1 4 none
26 Fill Factor Threshold 25 percent 66 Gain 2 4 none
27 Unused 0 Units 67 Gain 3 2 none
28 Unused 0 Units 68 Gain 4 2 none
29 Unused 0 Units 69 Gain 5 2 none
30 Unused 0 Units 70 Gain 6 3 none
31 Unused 0 Units 71 Gain 7 4 none
32 Unused 0 Units 72 Parallel Port Configuration 1 0/1
33 Unused 0 Units 73 Unused 0 Units
34 Unused 0 Units 74 Metal Detector Pitch 0 0/1
35 Unused 0 Units 75 Delay Even/Odd 0 0/1/2
36 Unused 0 Units 76 Security Code 11111 none
37 Unused 0 Units
38 Unused 0 Units
39 Unused 0 Units Global Parameter Back
40 Solenoid Board Configuration 0 none Sort-Specific Parameter

Full and unrestricted access to parameters and machine setup is provided to customer at all times. Training is provided as part of the startup and commissioning.

Others

Only limited access to machine setup and trouble-shooting is provided to customers.